

**Кабели для подключения интерфейса Unicom-Part-2 и Unicom-4 к трансиверам**

	Модель трансивера	Название кабеля	CAT интерфейс	Примечания
ICOM	IC-77, IC-707, IC-725, IC-726, IC-728, IC-729, IC-735 (731), IC-736, IC-737 (732), IC-738, IC-756, IC-756Pro, IC-756ProII, IC-756ProIII, IC-760, IC-761, IC-765, IC-775, IC-781, IC-820, IC-821, IC-910, IC-9700, IC-7400, IC-7600, IC-7610, IC-7400, IC-7700, IC-7800, IC-7851, IC-M700TY	Unicom-IC-8	CI-V	Uses ACC connector
	IC-703, IC-706, IC-706mkII, IC-706mkIIG, IC-718, IC-78, IC-7000, IC-7100, IC-7200, IC-7300, IC-7410, IC-9100	Unicom-IC-13	CI-V	Uses ACC connector
	IC-746, IC-746Pro	Unicom-IC-746	CI-V	Uses ACC connector
	IC-7700, IC-7800 (CAT Uses RS-232 connector)	Unicom-IC-7800	RS-232	Uses ACC connector
	IC-R20	Unicom-IC-R20	CI-V	
	IC-910, IC821 (Uses DATA connector)	Unicom-IC-910	CI-V	Uses DATA connector
	IC-703, IC-706mkII, IC-7000 (Uses DATA connector)	Unicom-IC-7000	CI-V	Uses DATA connector
	IC-970 (Uses DATA connector)	Unicom-IC-970	CI-V	Uses DATA connector
	IC-705	Unicom-IC-705	CAT отсутствует	
IC-R7000	Unicom-IC-R7000	CI-V		
KENWOOD	TS-140, TS-440, TS-680, TS-711, TS-811, TS-940, TS-450, TS-690, TS-790, TS-850, TS-950. <b>Notes:</b> FSK RCA is necessary only for the TS-850 TS-950. TS50 , TS60 - requires Kenwood IF-10D. TS140 , TS680 - requires Kenwood IF-10C. TS711 , TS811 - requires Kenwood IF-10A. TS711 , TS811 - requires Kenwood IF-10A. TS 940 - requires Kenwood IF-10B. TS 440 - requires Kenwood IF-10.	Unicom-TS-6	IF-232	Uses ACC-2 connector
	TS-570S, TS-570D, TS-590, TS-870, TS-870S. <b>Notes:</b> FSK RCA is necessary only for the TS-870 TS-870S	Unicom-TS-9	RS-232	Uses ACC-2 connector
	TS-2000, TS-2000X, TS-B2000	Unicom-TS-2000	RS-232	Uses ACC connector
	TS-480HX, TS-480SAT (Uses DATA connector)	Unicom-TS-MINI6	RS-232	Uses DATA connector
	TS-430, TS-930 (DIGITAL Uses MIC&SP connector)	Unicom-TS-430	CAT отсутствует	DIGITAL Uses MIC&SP connector
	TH-D7 (DIGITAL Uses MIC&SP connector)	Unicom-TS-TH-D7	RS-232	DIGITAL Uses MIC&SP connector
	TS-50 (requires Kenwood IF-10D, DIGITAL Uses MIC connector)	Unicom-TS-50	IF-232	requires Kenwood IF-10D, DIGITAL Uses MIC connector
	TS-50 (CAT uses CN6 connector, DIGITAL Uses MIC connector)	Unicom-TS-50	IF-232	CAT uses CN6 connector, DIGITAL Uses MIC connector
	TRC-80, TK-80	Unicom-TRC-80	IF-232	Uses ACC-2 connector
YAESU	FT-600	Unicom-FT-600	FIF-232	
	FT-736	Unicom-FT-736	FIF-232	
	FT-747GX (DIGITAL Uses MIC connector)	Unicom-FT-747GX	FIF-232	DIGITAL Uses MIC connector
	FT-757GXII	Unicom-FT-757GXII	FIF-232	
	FT-757	Unicom-FT-757	CI-V	
	FT-767GX, FT-980	Unicom-FT-767GX	FIF-232	
	FT-840	Unicom-FT-840	RS-232	DIGITAL Uses MIC connector
	FT-847	Unicom-FT-847	FIF-232	
	FT-890, FT-900, FT850	Unicom-FT-890	RS-232	
	FT-920	Unicom-FT-920	FIF-232	
	FT-990, FT-1011	Unicom-FT-990	FIF-232	
	FT-1000, FT-1000D	Unicom-FT-1000D	RS-232	
	FT-1000MP, FT-1000MPmkV, FT-1000MPmkVField, FT-2000, FTDX-5000	Unicom-FT-1000MP	RS-232	
	FTDX-9000D, FTDX-9000MP, FTDX-9000Contest	Unicom-FT-9000	RS-232	
	FT-450, FT-450, FT-991, VX-1700	Unicom-FT-450	RS-232	
	FT-950, FTDX-10, FTDX-101, FTDX-1200, FTDX-3000	Unicom-FT-950	RS-232	
	FT-3000, FT-7100, FT-7800, FT-8100R, FT-8800R, FT- 8900R	Unicom-FT-8800	CAT отсутствует	
	FT-857, FT857D, FT897, FT897D, FT-100, FT-100D, FT-817, FT-818, FT-891	Unicom-FT-857	FIF-232	
	FT-857, FT857D, FT897, FT897D (CAT Uses MIC connector)	Unicom-FT-857MIC	FIF-232	CAT Uses MIC connector
FT-2980	Unicom-FT-2980	CAT отсутствует		
VX-8	Unicom-VX-8	CAT отсутствует		
VX-1210	Unicom-VX-1210	CAT отсутствует		

TEN TEC	TT-Argonaut V TT-Jupiter TT-Pegasus	Unicom-TT-JPA	CI-V	
	TT-Omni VI	Unicom-TT-OM	RS-232	
	TT-Omni V	Unicom-TT-OMV	RS-232	
	Ten Tec Orion, Orion II	Unicom-TT-OR	FIF-232	
Elekraft	Elekraft-K2	Unicom-EL-K2	RS-232	
	Elekraft-K3	Unicom-EL-K3	RS-232	
	Elekraft-K3S (CAT Uses RJ45 connector)	Unicom-EL-K3S	RS-232	
	Elekraft-KX3	Unicom-EL-KX3	RS-232	
Прочие	IST-145/245	Unicom-145/245	RS-232	
	Alinco-DX-70 (DIGITAL Uses MIC connector)	Unicom-Alinco-DX-70	CAT отсутствует	DIGITAL Uses MIC connector
	Alinco-DJ-MD5	Unicom-Alinco-DJ-MD5	CAT отсутствует	
	Xitgu-G90	Unicom-Xitgu-G90	CAT отсутствует	
	X1M-QRP	Unicom-X1M-QRP	FIF-232	
	AOR-8600-MARK-2 (receiver)	Unicom-AOR-8600	RS-232	
	SDR-FLEX-3000	Unicom-SDR-FLEX-3000	CAT отсутствует	
	Tlkr-T7	Unicom-Tlkr-T7	CAT отсутствует	
	Codan-NGT	Unicom-Codan-NGT	RS-232	
R2-CW	Unicom-R2-CW	CAT отсутствует		